

**FOR C-7 ELECTRIC LIGHT STRINGS
FLIC LUMINARIES
INSTALLATION & SET UP**

- 1) REMOVE THE LUMINARIES FROM THE REUSABLE SHIPPING/ STORAGE CARTON. TO UN-STACK OR "DE-NEST" THE LUMINARIES, IT IS EASIEST TO SET THEM ON A FLAT SURFACE, CLAMP THE BOTTOM LUMINARY LENGTHWISE BETWEEN YOUR FEET AND SQUEEZE SIDES OF LUMINARY ABOVE BOTTOM ONE WHILE GENTLY PULLING UP ON THAT LUMINARY.
- 2) ATTACH THE C-7 LIGHT STRING TO EACH LUMINARY:
 - A) REMOVE THE LIGHT STRING FROM THE BOX AND STRAIGHTEN OUT THE WIRE.
 - B) HOLD THE FIRST SOCKET UNDERNEATH A LUMINARY SO THAT THE SOCKET IS ALIGNED WITH THE BULB HOLE IN THE LUMINARY. PUT THE LIGHT BULB BASE THROUGH THE BULB HOLE AND THEN SCREW THE BULB INTO THE SOCKET.
 - C) REPEAT FOR EACH LUMINARY.
 - D) BY SKIPPING BULBS THE SPACING BETWEEN LUMINARIES CAN BE VARIED. TO DO THIS SIMPLY UNSCREW AN UNWANTED BULB ABOUT A QUARTER TURN SO THAT IT WILL NOT LIGHT.
 - E) WHEN SETTING OUT THE LUMINARIES RUN THE WIRE IN THE WIRE CHANNEL UNDER EACH LUMINARY. NOTE: DUCT TAPING THE WIRE INTO THE WIRE CHANNEL WILL MAKE PLACEMENT OF THE LUMINARY EASIER ON FLAT SURFACES SUCH AS SIDEWALKS, ETC.
- 3) OPTIONS TO SECURE LUMINARIES:
 - A) STAKES-USE FLIC LUMINARY STAKES. SET THE LUMINARY AT THE EDGE OF YOUR WALK OR DRIVEWAY OR FLAT ON ANY SOIL SURFACE. INSERT THE STAKE AND PUSH INTO SOIL AS FAR AS POSSIBLE.
 - B) GRAVEL OR SAND WEIGHTING-USE 1 1/2 -2 CUPS. DO NOT FILL OVER THE LEVEL OF THE CANDLE PEDESTAL
- 4) PLACE THE LUMINARIES IN THE DESIRED LOCATION ON A LEVEL SURFACE.
- 5) TURN ON THE LUMINARIES AT THE DESIRED TIME
- 6) CLEAN UP:
 - A) IF GRAVEL OR SAND IS USED DO NOT EMPTY. LEAVE IN LUMINARY FOR NEXT USE. IF FLIC LUMINARY STAKES WERE USED DO NOT REMOVE FROM LUMINARY. LEAVE IN LUMINARY FOR NEXT USE.
- 7) STORAGE:
 - A) DO NOT REMOVE THE LIGHT STRING FROM THE LUMINARIES. THE LUMINARIES WILL STACK OR "NEST" WITH THE LIGHT STRING ATTACHED. THE ORIGINAL SHIPPING CARTON IS DESIGNED TO STORE THE LUMINARIES UNTIL THE NEXT USE.

LUMINARY SAFETY PRECAUTIONS

- 1) READ AND FOLLOW ALL SAFETY INSTRUCTIONS, ALL USE AND CARE INSTRUCTIONS, AND ALL USER SERVICING INSTRUCTIONS THAT ARE INCLUDED WITH THE C-7 LIGHT STRING.
- 2) LUMINARIES SHOULD NOT BE LEFT UNATTENDED.

**FOR CANDLES
INSTALLATION & SET UP**

- 1) REMOVE THE LUMINARIES FROM THE REUSABLE SHIPPING/ STORAGE CARTON. TO UN-STACK OR "DE-NEST" THE LUMINARIES IT IS EASIEST TO SET THEM ON A FLAT SURFACE, CLAMP THE BOTTOM LUMINARY LENGTHWISE BETWEEN YOUR FEET AND SQUEEZE SIDES OF LUMINARY ABOVE BOTTOM ONE WHILE GENTLY PULLING UP ON THAT LUMINARY.
- 2) OPTIONS TO SECURE LUMINARIES:
 - A) STAKES-USE FLIC LUMINARY STAKES. SET THE LUMINARY AT THE EDGE OF YOUR WALK OR DRIVEWAY OR FLAT ON ANY SOIL SURFACE. INSERT THE STAKE AND PUSH INTO SOIL AS FAR AS POSSIBLE.
 - A) GRAVEL, SAND, OR WATER WEIGHTING-USE 1 1/2 -2 CUPS. DO NOT FILL OVER THE LEVEL OF THE CANDLE PEDESTAL
- 3) INSTALL THE SELECTED WEIGHTING MATERIAL.
- 4) PLACE THE LUMINARIES IN THE DESIRED LOCATION ON A LEVEL SURFACE.
- 5) PLACE A CANDLE HOLDER AND A CANDLE IN EACH LUMINARY WITHIN THE PEDESTAL CIRCULAR RING.
- 6) LIGHT THE LUMINARIES AT THE DESIRED TIME.
- 7) CLEAN UP:
 - A) PROPERLY DISPOSE OF THE USED CANDLES & SAVE THE CANDLE HOLDER FOR REUSE. **CANDLE HOLDERS CAN BE REUSED UP TO 5 TIMES.**
 - B) IF GRAVEL OR SAND IS USED DO NOT EMPTY. LEAVE IN LUMINARY FOR NEXT USE. IF FLIC LUMINARY STAKES WERE USED DO NOT REMOVE FROM LUMINARY. LEAVE IN LUMINARY FOR NEXT USE.
- 8) STORAGE:

THE ORIGINAL SHIPPING CARTON IS DESIGNED TO STORE THE LUMINARIES UNTIL THE NEXT USE.

LUMINARY SAFETY PRECAUTIONS

- 1) LUMINARIES SHOULD ONLY BE BURNED OUTSIDE ON A LEVEL SURFACE.
- 2) LUMINARIES SHOULD NOT BE PLACED ON ANY SURFACE THAT IS FLAMMABLE.
- 3) LUMINARIES SHOULD NOT BE PLACED NEAR ANYTHING THAT IS FLAMMABLE.
- 4) LUMINARIES SHOULD NOT BE LEFT UNATTENDED.
- 5) DO NOT ATTEMPT TO REMOVE CANDLE OR CANDLE HOLDER IF MOLTEN WAX IS PRESENT.

CLEANING CANDLE HOLDERS - USE TEASPOON TO SCOOP OUT UNBURNED WAX AND WICK HOLDER. CANDLE HOLDERS CAN BE REUSED UP TO 5 TIMES.

**FLIC LUMINARIES
1-YEAR LIMITED WARRANTY**

This one-year limited warranty ("Warranty") is provided by Flicker Luminary Improvement Company, LLC ("FLIC"), 4037 East English, Wichita, Kansas 67218; phone 888-550-3542.

This Warranty is To:

To you if you are a consumer purchaser of FLIC luminaries.

What is Covered:

Under normal use and service, your FLIC luminaries should be free from defects in workmanship and material for a period of one (1) year from the date of purchase, EXCEPT FOR THE EXCLUSIONS, LIMITATIONS AND EXCEPTIONS SET FORTH BELOW.

What We Will Do If the Product Fails:

If the product fails, FLIC will either repair or replace the luminaries in question as your sole remedy. FLIC will exercise its judgment and shall have the sole option to select the best method to remedy the failure.

Costs That You Will Be Responsible For:

You will be responsible for certain costs associated with the repair or replacement of FLIC luminaries. Costs we do not accept include prepaid freight and postage costs for products returned to FLIC.

EXCLUSIONS, LIMITATIONS AND EXCEPTIONS:

This Warranty does not apply and FLIC has no responsibility for: (1) freight damage; (2) abuse, misuse, improper or abnormal use and storage of the product; (3) repairs, including replacement parts, not provided by FLIC; and (4) product used for commercial or rental purposes.

THIS WARRANTY EXCLUDES ALL CONSEQUENTIAL, INCIDENTAL, OR SPECIAL DAMAGES ARISING OUT OF THE USE OR PERFORMANCE OF THE PRODUCT INCLUDING BUT NOT LIMITED TO ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUES/PROFITS, LOSS OF ENJOYMENT OR LOSS ATTRIBUTABLE TO BREACH OF ANY WARRANTY MADE HEREIN.

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the exclusion of consequential or incidental damages may not apply to you.

Warranty Duration:

This Warranty extends one (1) year from the date of purchase.

Disputes:

Buyer and FLIC specifically agree that any controversy or claim arising out of this Warranty shall be settled by arbitration in the State of Kansas (as exclusive venue) administered by the American Arbitration Association under its Commercial Arbitration Rules.

Claims Procedure:

If the product fails, please notify Flicker Luminary Improvement Company, LLC, 4037 East English, Wichita, Kansas 67218; phone 888-550-3542 during regular business hours (Monday-Friday 9 a.m. to 5 p.m. CST). Notification must be made within thirty (30) days of the discovery of the product failure. Upon receipt of such notification, FLIC will investigate the nature of the problem and perform its obligations as required herein.